



Component List



A - 1/4 - 20 Screw x 3

4mm and 5mm Allen Wrench

Your Continuum Furniture is engineered for easy assembly. Carefully follow this procedure to prevent any damage.

Placement and Maintenance

Clean glass with glass cleaner. Clean steel parts and wood veneer with a moist cloth.

Step 1


Unpack and identify the parts listed. The assembly workspace should be a non-marring surface such as carpet. For missing hardware pieces please contact BDI Customer Service at customerservice@bdiusa.com. For all other concerns, please contact your BDI Retailer.

Step 2

Attach base to frame.

As shown below, lay pre-assembled panel on its side so that base can be easily installed. Line the hole of the base with the extended stud on the bottom of the frame then using the 4mm allen wrench, attach base to bottom of frame with **Countersunk Screws (A)**.

The 5mm allen wrench is supplied in case the wood panel swivel mechanism is not tightened properly. Please keep this tool in case the swivel mechanism loosens over time.

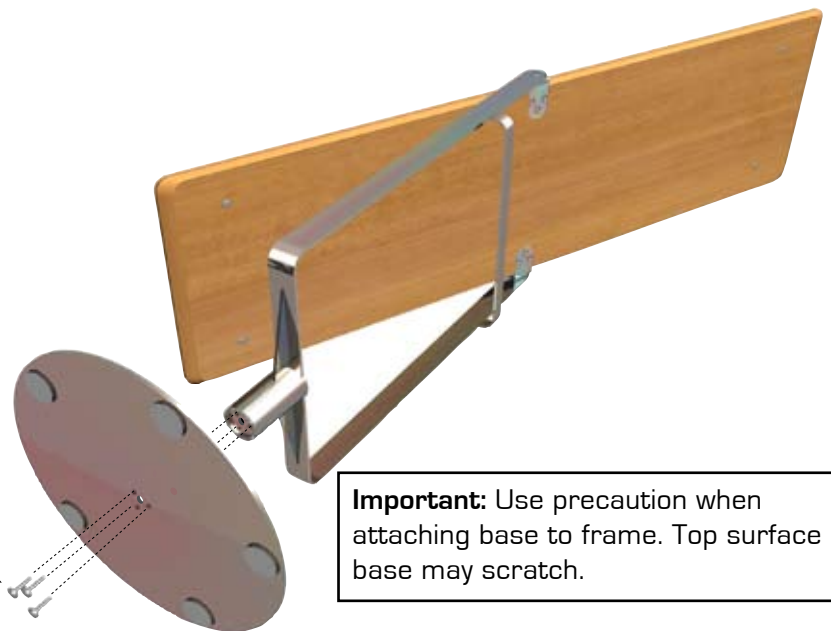

Important: Use precaution when attaching base to frame. Top surface of base may scratch.



Step 3

Attach mirror (2 people required).

One person should hold the angled wood panel so that the second person can attach the mirror. As shown below, hook the spacer block (behind mirror) to the spacer block (front of wood panel). Once mirror is attached, apply slight pressure to middle and lower section of mirror to ensure that Velcro strips are secured in position.

wood panel mirror panel

