






### Component List

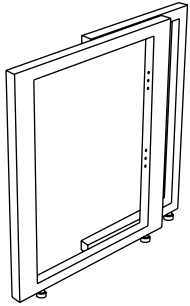

**A** - Assembled Frame x 1

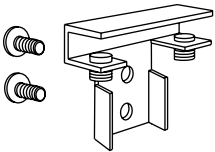

**B** - Glass Shelf Clip / Screw x 2

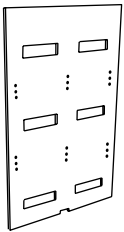

**C** - Back Panel x 1




**D** - 20mm Back Panel Shelf Pin x 2



**E** - Glass Shelf Pin x 6



**F** - 10mm Shelf Pin x 4




**G** - Shelf Bracket x 2




**H** - Rubber Bumper Insert x 11



**I** - Center Glass Shelf x 3




**J** - Top Glass Shelf x 1



**K** - Velcro Strap and Wood Screw x 8



**L1** - Allen Wrench x 1



**L2** - Allen Wrench x 1

Deploy<sup>®</sup> is engineered for easy assembly. Carefully follow this procedure to prevent any damage.

### Placement and Maintenance

Deploy<sup>®</sup> is designed for indoor use on level floors. Clean glass with glass cleaner, and steel parts and wood veneer with a moist cloth.

### Step 1

#### Unpack and Identify

Unpack and identify the components at left. The assembly workspace should be a non-marring surface such as carpet. For missing hardware pieces, please contact BDI Customer Service at customerservice@bdiusa.com. For all other concerns, please contact your BDI Retailer.


### Step 2

Unfold the metal legs on the **Assembled Frame (A)**.



### Step 3


Install **Glass Shelf Clip (B)** to the rear side of unfolded metal leg using the supplied **Allen Wrench (L2)**. **Do not tighten set screws until glass shelf is installed during Step 5.**

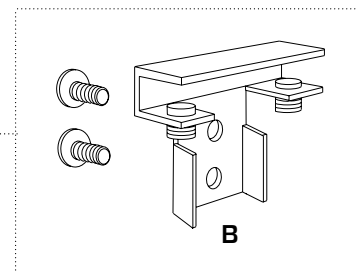

#### Step 4

##### Install back panel


Install **Back Panel (C)** using the **Back Panel Shelf Pin (D)** and **Allen Wrench (L1)**. Install **Glass Shelf Pin (E)** to desired height location on **Back Panel (C)** using a flat head screw driver.

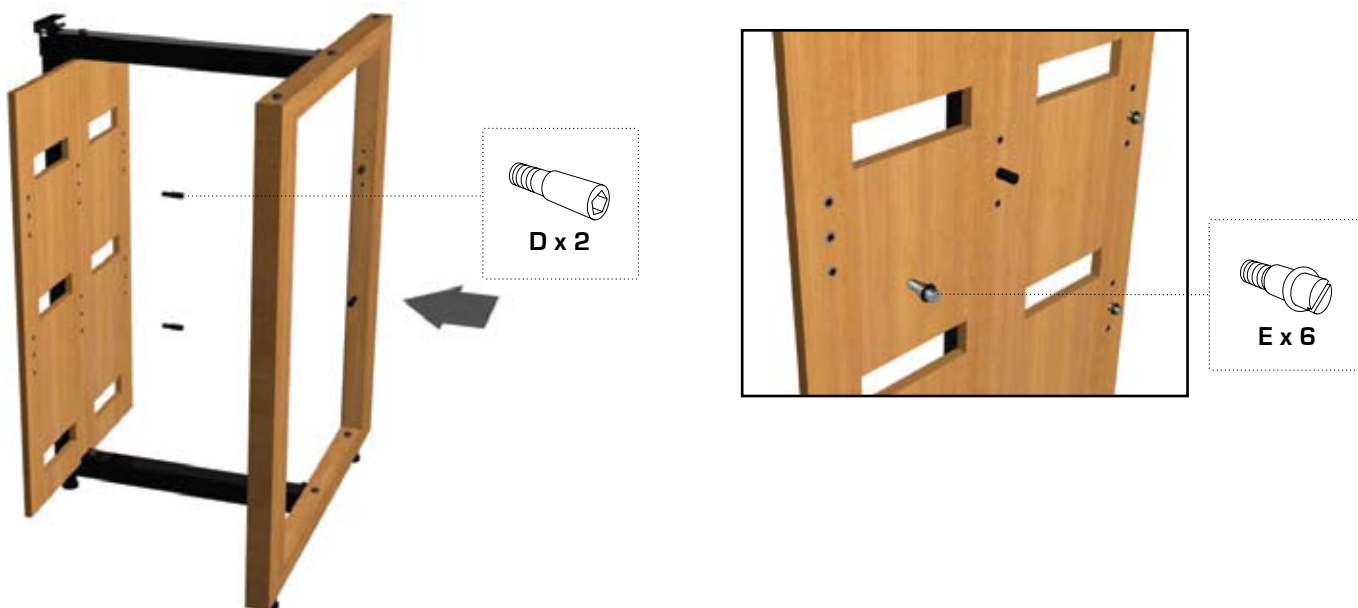

#### Step 5

##### Installing the Shelf Brackets and Rubber Bumper Inserts




Install **Shelf Pin (F)** using **Allen Wrench (L1)**. Install **Shelf Brackets (G)** on previously installed **Shelf Pin (F)**. Once **Shelf Brackets (G)** are in place, install **Rubber Bumper Inserts (H)** in all visible hole locations.

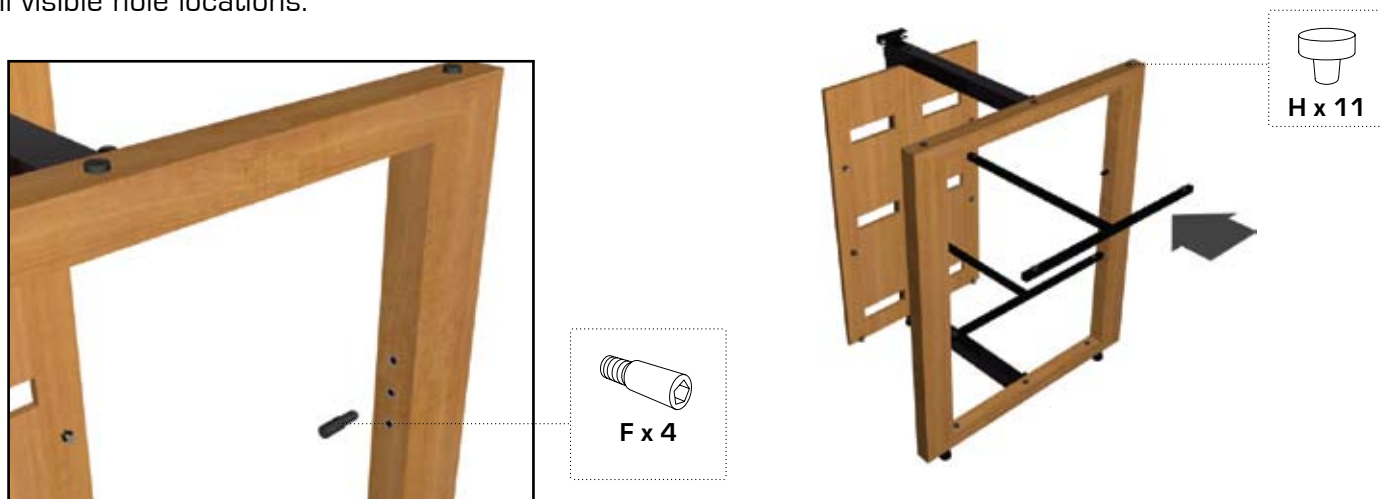

## Step 6

### Install the glass shelves

Install **Center Glass Shelves (I)** and **Top Glass Shelf (J)**. Tighten set screws on bottom of **Glass Shelf Clip (B)** to keep **Top Glass Shelf (J)** from sliding out of position, then tighten both machine screws on back of **Glass Shelf Clip (B)**.

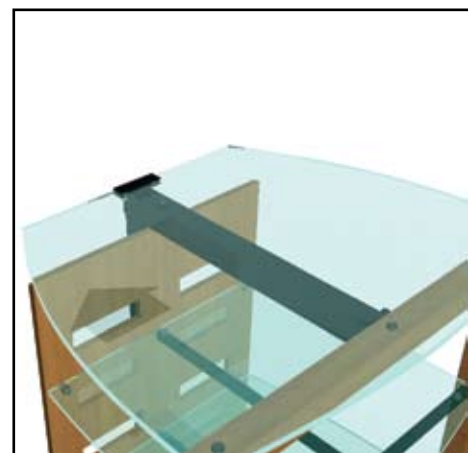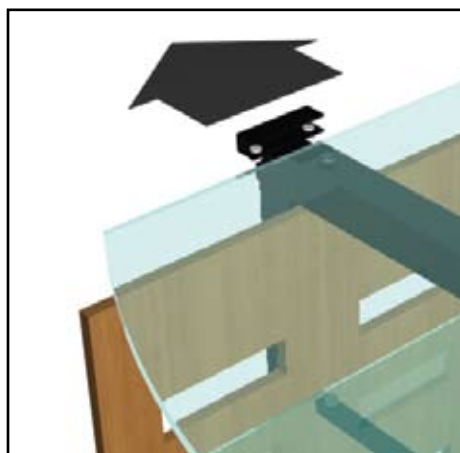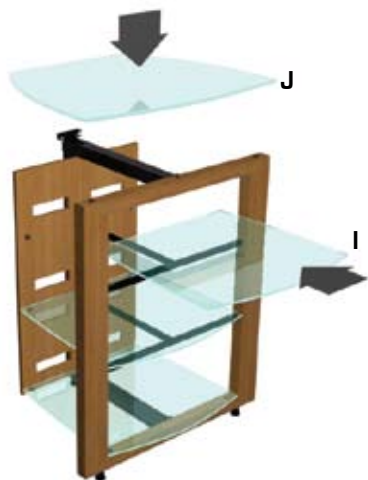

## Step 7

### Cable Management

**Velcro Straps and Wood Screws (K)** are supplied, and can be used for organizing cable management. On the rear side of the back panel are pre-drilled holes for installing the **Velcro Straps (K)** using a Phillips screw driver.

